



APPLY THE (6) 2 X 3/4 IN. STRIPS
OF CLEAR DUCT TAPE TO ATTACH
THE (2) 3/16 X 24 IN. DOWEL RODS.
(SEE NOTE)

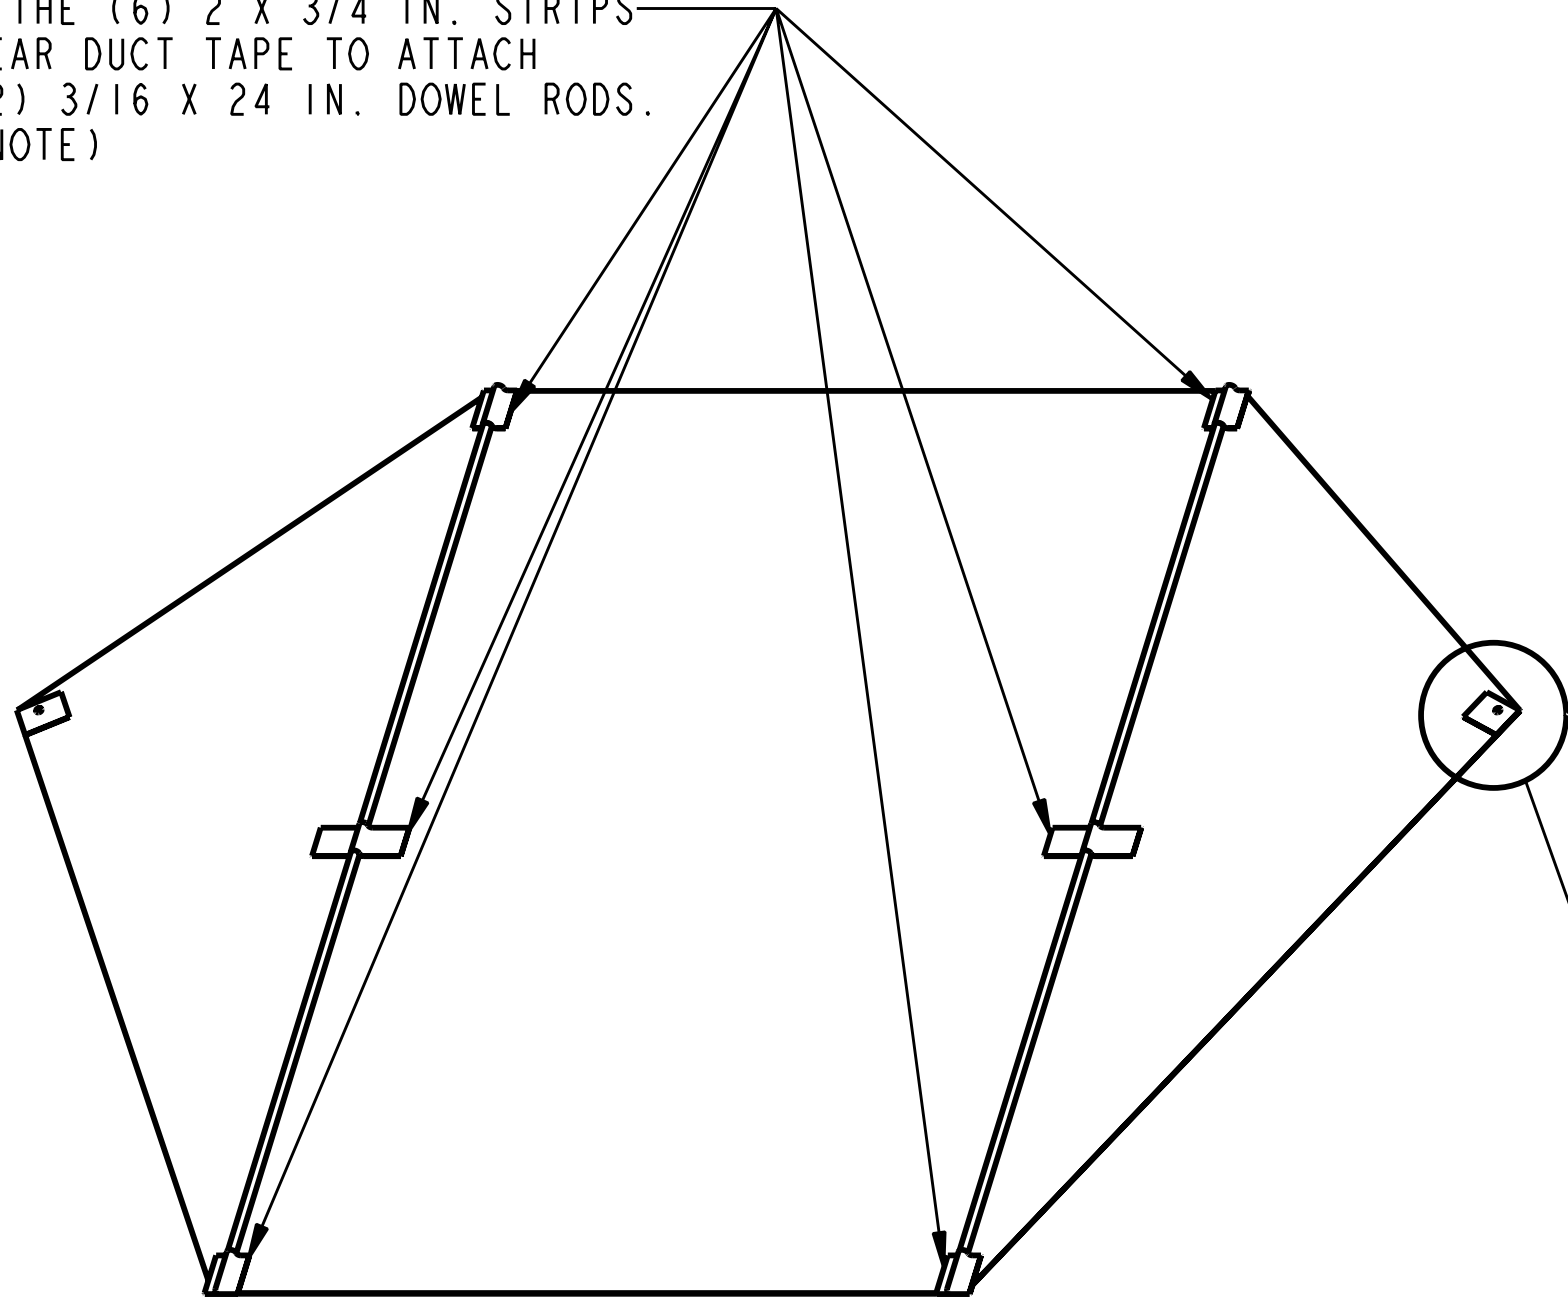


NOTE: TO ATTACH THE ROD ENDS,
APPLY 1/2 OF THE TAPE STRIP
TO THE BACK OF THE PLASTIC
SHEET, THEN FOLD REMAINING
HALF OVER AND APPLY TO ROD
AND OPPOSITE SIDE OF SHEET.

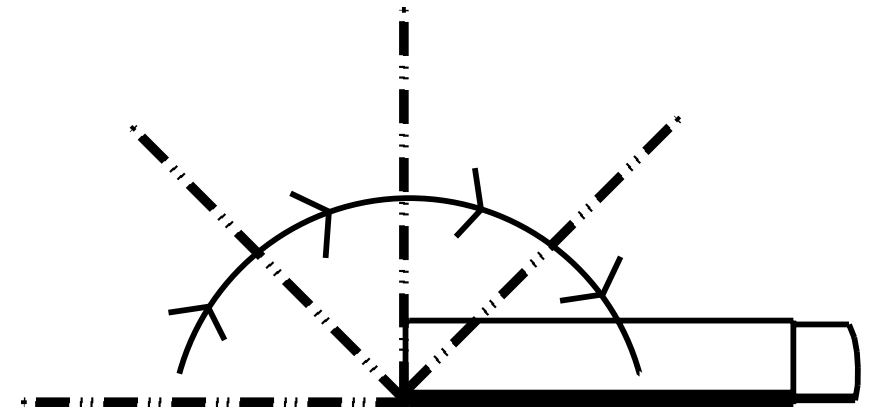

SEE ENLARGED DETAIL BELOW

APPLY (2) 1 X 3/4 IN. PIECES
OF CLEAR DUCT TAPE TO BOTH
SIDES OF THE CORNERS.

PUNCH 1/8 IN. HOLE APPROX.
1/2 IN. FROM CORNER.

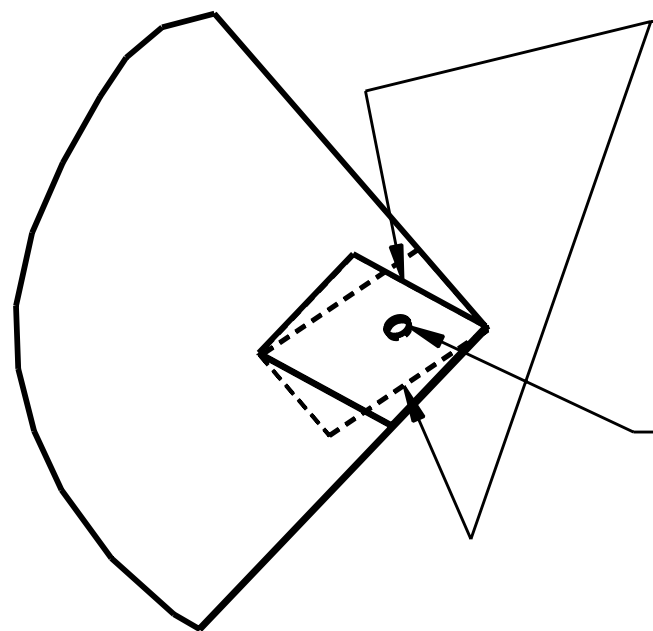

SLED KITE ASSEMBLY

FIRST FLIGHTS CLASS

20071227